in business since 1913


Ellis & Sons Group PTY LTD

White 'Underside'
Blue Tarp 'Top '




TARP JOINING INSTRUCTIONS - WELDING


Step 1: Start new tarp with existing tarp to the right as shown.

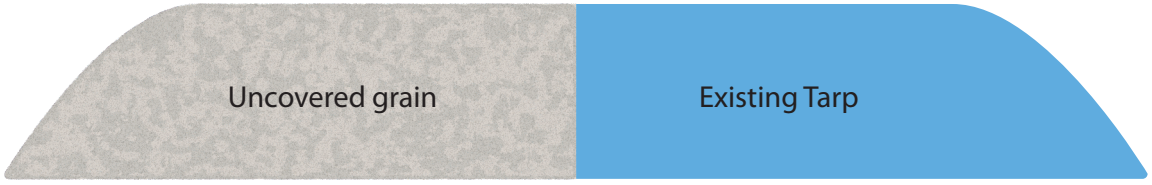


Step 2: Pre-fold existing tarp as shown.

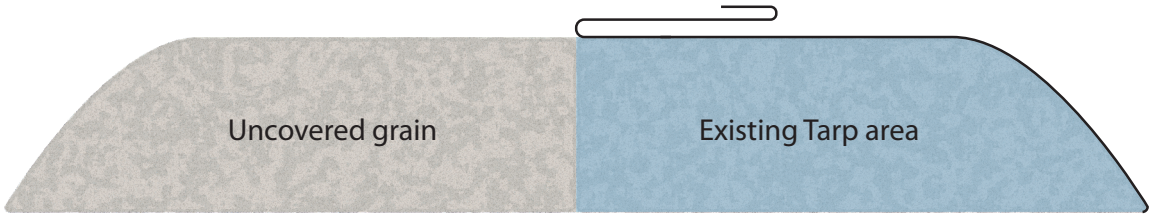

Step 3: Pull out the new tarp over the bunker as you would with a roll of paper towel i.e. Pull end of tarp up and over bunker while the steel pipe stays stationary. Tarp situated as shown.

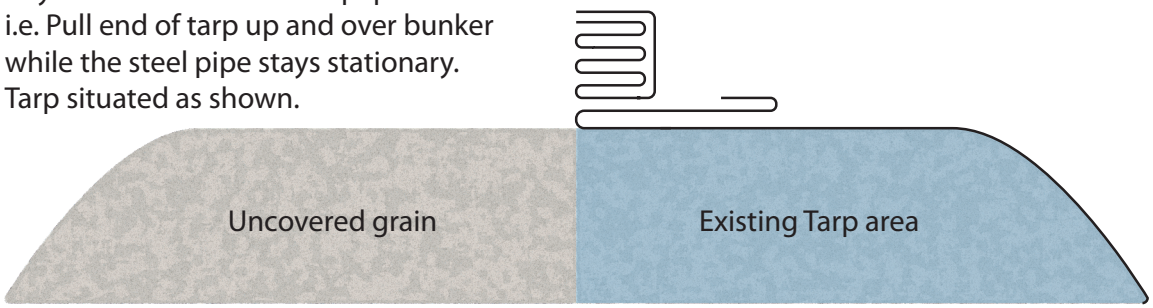

Step 4: Fold leading edge back on existing tarp as shown and weld.

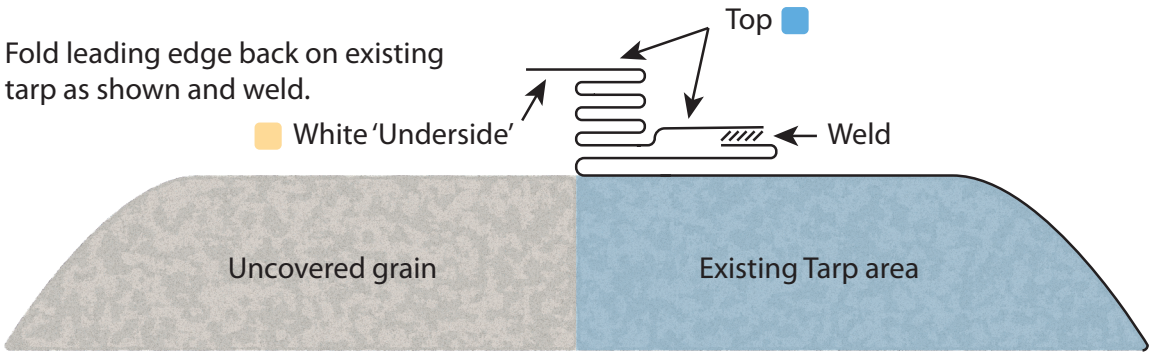

Step 5: Pull new tarp out from top edge.

